


FOCUSER TEMPERATURE SENSOR CONNECTIONS AND CALIBRATIONS

SERVO I

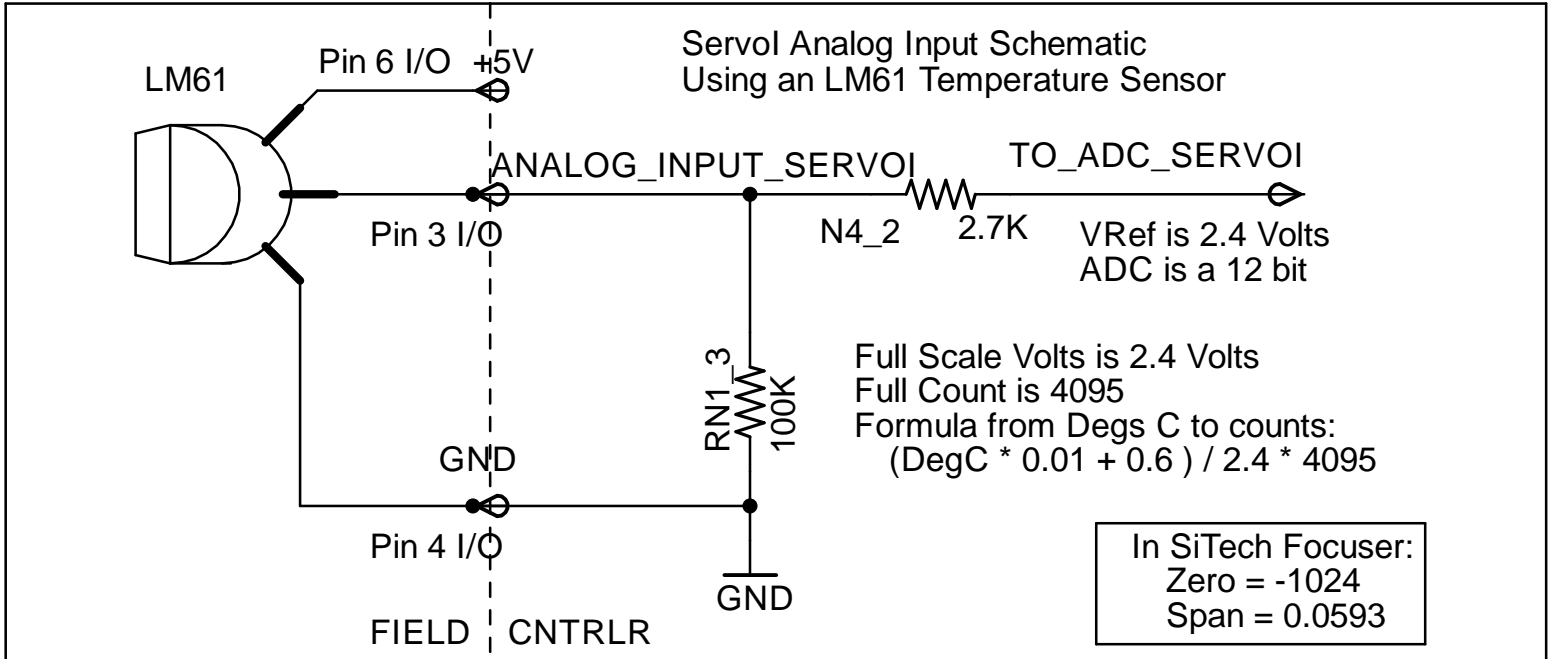

SERVO II

